

Specification

Name	Model No.	Input Power	Rated Frequency	Rating Wattage
Non-Stick Griddle	JEA82	220-240v	50Hz	1350-1500W

THIS PRODUCT MUST BE EARTHED.



Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at our option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice has been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE CUSTOMER SERVICES, HORWOOD, AVONMOUTH WAY,
BRISTOL, BS11 9HX, GREAT BRITAIN

sales@horwood.co.uk www.horwood.co.uk Tel: 0117 940 0000



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY



Non-Stick Griddle

Model No: JEA82



Please read this instruction manual carefully before use and save for later reference.

UNPACK YOUR GRIDDLE CAREFULLY AND REMOVE
PACKING PIECES, LABELS AND STICKERS BEFORE USE.

Identifying the parts of your Judge Non-Stick Griddle



- 1. Cooking Plate
(This complete fixture becomes HOT)
- 2. Handles
- 3. Thermostat Socket
- 4. Thermostat
- 5. Heating Confirmation Light
- 6. Thermostat Heating Level Dial
- 7. Power Cord and Plug
- 8. Drip Tray (see next page)



Before First Use

- Manufacturing taint - the Griddle needs to be operated once to Level 5 before use.
- Plug-in the Thermostat (4) to the Thermostat socket (3) and set the heating level dial (6) to maximum - position 5.
- Plug the Power Cord (7) into the mains socket, switch on the socket.
- Leave for 10 minutes, it is normal for smoke and smells to be emitted during this operation - manufacturing residues are being removed.
- Follow the cleaning instructions

How to Use

1. Plug-in the Thermostat (4) to the Thermostat socket (3) and set the dial to the OFF position.
 2. Plug the Power Cord (7) into the mains socket, switch on the socket.
 3. Choose the Heating Level required and set this on the Dial (6) - the Heating Confirmation light (5) will turn on.
 4. Once this temperature has been reached, heating will stop and the Heating Confirmation Light (5) will turn off. Then the unit will maintain the temperature set by heating automatically as necessary.
- Very little oil/fat is necessary during cooking. It is better to marinate food previously, or coat the food with herbs, spices, oil, butter etc. Residual oils and fats may be collected in the channel at the front of the Cooking Plate (1) and drained into the Drip Tray (8) which is located under the Cooking Plate (1).
 - Use only wooden or nylon tools, and do not cut food with a knife or any other sharp implement on the Non Stick cooking surface to avoid damage.
 - The Detachable Thermostat (4) can be removed before serving the dish at the table: if the dish is actually cooked on the table ensure that the Safety Advice - given previously - is followed and understood by those around the table.

CAUTION: THE GRIDDLE BECOMES HOT IN USE - HOTTER THAN NORMAL SERVING DISHES. USE OVEN GLOVES AND USE THE HANDLES (2).

Cleaning

- Switch unit OFF at the socket, remove plug (7) from the socket and allow the Griddle to cool thoroughly before handling.
- When the unit is cool remove the Detachable Thermostat (4) from the Thermostat Socket (3) before cleaning.



- The Cooking Plate (1) can be removed for cleaning by lifting away from the base using the Handles (2) on either side of the Griddle (this is only possible when the Detachable Thermostat (4) is removed).



- The Drip Tray (8) can now be accessed and removed for cleaning.
- Wipe the Cooking Plate (1) with a soapy cloth, and dry with a soft cloth. DO NOT USE STEEL WOOL, SCOURING PADS OR ABRASIVE CLEANERS on Non Stick surfaces.
- Never submerge the Cooking Plate (1) or any other part of the griddle except the Drip Tray (8) which should be washed in hot soapy water.

Cautions

- Ensure the Griddle Voltage and Power details match your home Supply.
- Do not plug-in to the socket, or operate with wet hands - or allow the Power Cord and Plug (7) to get wet.
- Do not operate the Griddle if the Power Cord (7) has become damaged - contact Judge Customer Services at the address given under the Warranty details.
- Do not let the Power Cord (7) trail within the reach of children, or where it can be accidentally snagged.
- Ensure the Power Cord (7) is not allowed to touch the hot surface of the Griddle, or any other heated object.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Never leave a Griddle unattended when it is heating.
- Protect precious surfaces with a heat resistant pad.
- Keep the Griddle well clear of soft furnishings or any other combustible material, or items that may be damaged by heat.
- Always disconnect the Griddle from the Mains supply when not in use.

CAUTIONS (CONTINUED)

- The Griddle must be unplugged and allowed to cool before cleaning.
- Never immerse the Griddle or Thermostat (4) in water.
- Do not use this Griddle if it is malfunctioning: contact Judge Customer Services at the address given under the Warranty details.
- The Griddle will become hot during and after operation. Take care to keep hands away from hot surfaces and use the Handles (2) to move the unit when hot.
- Do not use the Griddle for any other purpose than the use stated.
- Do not use the appliance in damp or wet conditions.
- Provide adequate air space (min 15cm) above and on all sides for air circulation
- The Griddle is intended for Domestic Use only.
- Do not attempt to repair this unit yourself - contact Judge Customer Services at the address given under the Warranty details.