

BEFORE FIRST USE

- Remove any tags/labels and wash in hot soapy water with a non-scratch nylon pan scourer or brush.
- Dry thoroughly.

DISHWASHER USE

- Your Cafetière and all components are suitable for dishwasher use. However as with all quality tea ware, hand washing is recommended.
- Dry thoroughly immediately after dishwasher use, or before extended storage.

USING YOUR CAFETIÈRE

- Do not stand the Cafetière on precious polished surfaces.
- Remove the entire plunger and lid, and pre-warm the jug with boiling water before use (for maximum heat retention).
- Measure medium-ground coffee into the jug - approximately 1 rounded tablespoon of ground coffee for every three cups of coffee being made (this will vary according to strength of brew and coffee type used and your personal preferences).
- Fill with boiling water to the desired level, (do not overfill - 1cm from below the pouring spout) and gently stir. **Hot water is dangerous - DO NOT OVERFILL**
- Replace the lid and plunger (pulled up). Leave for 5 minutes to infuse.
- Slowly push the plunger down - your coffee is ready to serve.

REPLACEABLE PARTS

- Over time you will need to replace the fine wire mesh at the bottom of your filter (JA94F). Please contact Judge Customer Service for a replacement (contact details under guarantee). Unscrew the plunger arm counter-clockwise from the filter, separate the parts, replace the mesh filter and reassemble.



GUARANTEE

Judge 25 Year Guarantee:

- Your Judge Cafetière has a 25 Year Guarantee to be free of defects in material and workmanship under normal household use, providing the Use, Care and Safety Advice is followed.
- We promise to the original purchaser that any defective part will be replaced during the course of the guarantee period (or we will supply a product of equal value if the product is out of production).
- The Guarantee does not cover damage caused by accident, misuse or commercial use. In addition, scratching, staining and damage from overheating and/or regular dishwasher use are not covered by the Guarantee.
- Incidental or consequential damages are excluded from this guarantee
- The Guarantee is in addition to your statutory rights. Please retain your purchase receipt.

Judge Customer Service

Horwood Homewares
Avonmouth Way
Bristol
BS11 9HX
Great Britain

customerservice@horwood.co.uk

www.judgecookware.co.uk

Tel: 0117 940 0000