



About your Judge Sizzle & Serve Product

- Judge Sizzle & Serve products can be used on all hob types and even on your BBQ!
- Cast iron has the ability to heat to very high temperature, ideal for cooking and serving meats and fish.
- The maple wood serving stand should never be heated, either on the hob or in the oven.

Before Use

- Remove packaging, soak the cast iron sizzler in hot soapy water for at least 5 minutes.
- Wash, rinse and dry thoroughly. Follow the seasoning instructions below.
- The maple wood serving stand should never be soaked in water. When necessary wash, rinse and dry thoroughly.

Seasoning

- Before seasoning your sizzler ensure the cooking surface is bone dry.
- Wipe the interior cooking surface of the sizzler evenly with a little good quality vegetable oil.
- For optimum performance turn on your hob, and heat gently until smoke starts to appear.
- Turn off your hob, and allow to cool to room temperature.
- Wipe off any excess oil before use/storage.

Cooking and Seving

- Always match the size of the sizzler base to the size of the heating area.
- Never use full power when you first heat your sizzler, always start at a lower power setting and gradually increase to the desired level.
- Do not pour cold water into the hot sizzler, as this may cause warping.
- Never allow a gas flame to extend up the sides of a sizzler, as it can cause overheating.
- Do not store food in the sizzler.
- The sizzler is not suitable for microwave use.
- Never leave the sizzler unattended on a hob.
- Always use oven gloves or similar when moving the hot sizzler, either on the hob, oven or when taking to the table.
- If your product has a detachable handle ensure it is securely attached before lifting the sizzler.

Cleaning & Maintenance

- When necessary the sizzler interior can be scrubbed with a scrubbing brush or cleaning cloth to remove stubborn stains.
- For best performance it is important to apply a layer of oil on the cooking surface after every wash. Follow the earlier seasoning instructions.
- Neither the sizzler or maple wood serving stand are suitable for dishwasher use.

Guarantee

- All Judge Sizzle & Serve pans have a 5 Year Guarantee to be free of defects in material and workmanship under normal household use, providing the Use, Care and Safety Advice is followed.
- We promise to the original purchaser that any defective part of the pan will be replaced during the course of the guarantee period (or we will supply a product of equal value if the product is out of production).
- The Guarantee does not cover damage caused by accident, misuse or commercial use. In addition, scratching, staining and damage from overheating are not covered by the Guarantee.
- Incidental or consequential damages are excluded from this guarantee
- The Guarantee is in addition to your statutory rights. Please retain your purchase receipt.