### BEFORE FIRST USE

- Remove any tags/labels and wash in hot soapy water with a non-scratch nylon pan scourer or brush.
- · Dry thoroughly.

## **DISHWASHER USE**

- Your Frother and all components are suitable for dishwasher use. However as with all quality tea ware, hand washing is recommended.
- Dry thoroughly immediately after dishwasher use, or before extended storage.

### **USING YOUR FROTHER**

- Do not stand the Frother on precious polished surfaces.
- Remove the entire plunger and lid.
- Pour in milk (full fat will give the best results) up to the max 150ml fill level.
- Replace the lid and plunger assembly and ensure the lid filter covers the spout. Whilst holding the lid in place pump the plunger up and down until the desired level of froth is achieved.
- Remove the lid and plunger assembly and wash under the tap.
- Pour to serve

#### WARMING MILK:

 The milk can be pre-heated before frothing, but for best and safer results we suggest to warm your milk after frothing using a medium heat in your microwave (Please ensure that you remove the lid and plunger assembly - as these are not suitable for microwave use).

#### **GUARANTEE**

# Judge 25 Year Guarantee:

- Your Judge Frother has a 25 Year Guarantee to be free of defects in material and workmanship under normal household use, providing the Use, Care and Safety Advice is followed.
- We promise to the original purchaser that any defective part will be replaced during the course of the guarantee period (or we will supply a product of equal value if the product is out of production).
- The Guarantee does not cover damage caused by accident, misuse or commercial use. In addition, scratching, staining and damage from overheating and/or regular dishwasher use are not covered by the Guarantee.
- Incidental or consequential damages are excluded from this guarantee
- The Guarantee is in addition to your statutory rights.
  Please retain your purchase receipt.

# Judge Customer Service

Horwood Homewares Avonmouth Way Bristol BS11 9HX Great Britain

customerservice@horwood.co.uk

www.judgecookware.co.uk

Tel: 0117 940 0000