



Stick Blender

Model No. JEA96



Instruction manual

- ◆ Please read carefully before use and save for later reference
- ◆ Unpack your Stick Blender carefully
- ◆ **CUTTER BLADES IN THEN BLENDING UNIT ARE SHARP!**
- ◆ Remove packing pieces, labels and stickers

Identifying the parts of your Stick Blender

1. Motor Unit
2. Blending Unit
3. Cutter Head
4. Speed Dial
5. Power Button
6. Turbo Button
7. Power Cord and Plug



Before first use

- ◆ Wash the Blending Unit ② as detailed in the ‘Cleaning’ section. Beware Sharp Blades in the Blending Unit ②. Wipe the Motor Unit ① with a damp, soapy cloth and dry thoroughly. **DO NOT IMMERSE THE MOTOR UNIT ① IN WATER.**

Assembly

- ◆ Ensure that the Motor Unit ① is disconnected from the electricity supply before assembly.



- ◆ The Motor Unit ① drops into the Blending Unit ②, and positively LOCKS when rotated clockwise.

How to Use

- ◆ The Stick Blender should be used with a suitable bowl which is sited on a dry, level and stable surface, away from direct heat.
- ◆ Before blending turn the Speed Dial ④ clockwise to set the blender on it's lowest speed setting to avoid splashing.
- ◆ Food to be blended should be cut into approx. 2cm / 3/4" pieces - if you want an even blend, start with pieces of about the same size. If 'stringy' ingredients are being processed such as celery or leeks, regularly clean the Cutter Head ③.

- ◆ While blending, power can be increased by turning the Speed Dial ④ counter clockwise or decreased by turning the Speed Dial ④ clockwise.
- ◆ Press the Turbo Button ⑥ for short bursts of high power blending.
- ◆ Maximum continuous usage time should be no more than 1 minute, followed by a 3 minute rest period before the next use.

Cleaning

- ◆ Unplug the Stick Blender from the electricity socket before cleaning.
- ◆ Thoroughly wash the Blending Unit ② in warm soapy water and dry with a soft cloth.
- ◆ Do not soak/immerse the Blending Unit ② in water for long periods.
- ◆ The Blending Unit ② is dishwasher safe.
- ◆ Wipe the Motor Unit ① with a damp, soapy cloth and dry thoroughly. DO NOT IMMERSE THE MOTOR UNIT IN WATER.
- ◆ Store the Stick Blender, with blades protected, in a safe place to prevent accidents.
- ◆ Keep out of the reach of children.

Cautions

- △ Before use, read all instructions and check that your mains power supply corresponds to the voltage shown in this manual.
- △ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- △ Children shall not play with the appliance.
- △ Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- △ Do not allow children or the infirm to operate the Stick Blender without supervision.
- △ Always keep the Stick Blender out of the reach of children.
- △ The Stick Blender should only be used as instructed: there is potential for injury from misuse.
- △ Do not connect the plug into your socket with wet hands.
- △ Unplug the unit whenever it is not in use, and before cleaning or dismantling.
- △ Pull the plug (not the Power Cord) to disconnect from mains socket.

Cautions (continued)

- △ The Power Cord should not hang over the side of the worktop, where it could accidentally snagged or pulled by children.
- △ Do not move the Stick Blender around by pulling the Power Cord.
- △ Do not allow the Power Cord to touch any hot surface.
- △ If the Power Cord has been damaged in any way do not operate the appliance - contact Judge Customer Services at the address given in the Warranty section.
- △ Care must be taken when handling the sharp blades in the Blending Unit: always unplug the Stick Blender before cleaning or clearing the Cutter Head.
- △ The metal blades are extremely sharp, please handle carefully.
- △ Avoid contact with moving parts. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
- △ Always wait until the blades have come to a complete stop before removing the Blending Unit from your container/bowl.
- △ Do not use fingers to scrape food away from the sharp blades - keep fingers well away from rotating blades at all times. A plastic scraper may be used, but only when the electricity supply has been disconnected.

Cautions (continued)

- △ The appliance cannot be used for chopping ice or blending hard and dry substances, otherwise the blade could be blunted.
- △ Allow food to cool slightly before blending.
- △ The container/bowl used must be located in a level, stable position before operating the Stick Blender.
- △ Never immerse the Motor Unit in water to clean.
- △ Do not operate the appliance with a damaged cord or plug, after the appliance malfunctions is dropped or damaged in any manner or appears faulty in any way - contact Judge Customer Services at the address given below.
- △ Never attempt to make any repair to the Stick Blender yourself - contact Judge Customer Services at the address given in the Warranty section.
- △ Make sure that all surfaces that come into contact with food are kept scrupulously clean. Wipe work surfaces before and after use with an antibacterial cleaner.
- △ Please retain these instructions and your Purchase Receipt.

2

Year Guarantee

Domestic Electrical Use

- ◆ **The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.**
- ◆ During this period, Judge will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- ◆ The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- ◆ The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- ◆ **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- ◆ Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.



Customer Services

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.horwood.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000

Model No. and Specifications

Name	Judge Stick Blender
Model No	JEA96
Rated Voltage	220-240V~
Rated Frequency	50-60Hz
Rated Power	600W Max

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

**THIS PRODUCT IS INTENDED
FOR DOMESTIC USE ONLY**

**UK
CA**   **RoHS**

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.