



JUDGE

Non-Stick Pizza Maker

Model No. JEA89

1000W



Instruction Manual


Please read this instruction manual carefully
before use and save for later reference.



**UNPACK YOUR NON-STICK PIZZA MAKER CAREFULLY AND
REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.**

Identifying the parts of your Judge Non-Stick Pizza Maker

1. Outer Casing
2. Amber Power Light
3. Green 'Ready to Cook' Light
4. Top Non-Stick Heating Plate/ Lid
5. Bottom Non-Stick Heating Plate
6. Power cable
7. Plug

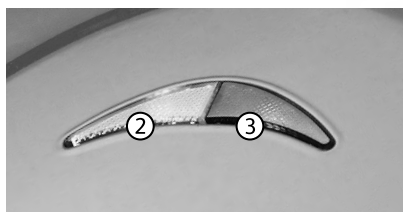

Before first use

- Remove all packing pieces, labels and stickers
- Clean the Pizza Maker -

Inside:

1. Use a small amount of hot, lightly soapy water and a non-scratch nylon pan scourer, brush or dish cloth to clean both **Top** ④ and **Bottom** ⑤ **Non-Stick Heating Plates** on the inside of the Pizza Maker.
2. Repeat with clean water to rinse.
3. Dry thoroughly.

Outside:

1. The **Outer Casing** ① of the Pizza Maker may be cleaned with a cloth slightly dampened in a solution of washing up liquid in hot water. Take care not to get the outside of the appliance too wet.
2. Dry thoroughly.

DO NOT IMMERSE THE PIZZA MAKER IN WATER OR ANY OTHER LIQUID.
DO NOT USE ANY ABRASIVE MATERIAL TO CLEAN THE SURFACE.

Cooking instructions

THE PIZZA MAKER CAN GET VERY HOT DURING USE. PLEASE USE WITH CAUTION AND ALWAYS USE A HEAT PROOF POT HOLDER/OVEN MITT.

The Judge Pizza Maker lets you bake any kind of pizza: frozen, chilled pre-baked or freshly home-made. The basic method is the same for all pizza types:

1. Insert the **Plug** ⑦ into a mains socket (check your supply is compatible with the Rating Information) and switch on at the socket. The **Amber Power Light** will illuminate ②.
2. Preheat the Pizza Maker with the **Lid** ④ down before use until the **Green 'Ready to Cook' Light** ③ illuminates (about 10-15 minutes).
3. When you are ready to cook, raise the **Lid** ④ using a heat proof pot holder/oven mitt.
4. Carefully place your pizza onto the **Bottom Non-Stick Heating Plate** ⑤. Use a wooden or nylon spatula to adjust the pizza position if necessary.
5. Close the **Lid** ④ using a heat proof pot holder/oven mitt.
6. Check the baking progress often (every few minutes) to avoid burning.
7. When the pizza is cooked to your liking, raise the **Lid** ④ using a heat proof pot holder/oven mitt and carefully remove to a board using a wooden or nylon spatula.
8. Do not cut the pizza while it is on the **Bottom Non-Stick Heating Plate** ⑤.

Cooking times

Cooking times given below are intended as a rough guide,

- **Fresh Pizza Dough**
Bake for 6 to 10 minutes
- **Chilled Pizza**
Bake for 4-6 minutes
- **Frozen Pizza**
Bake for 5 to 8 minutes

When using frozen pizza, it is advisable to let it sit at room temperature for about 10 to 15 minutes (while the Pizza Maker heats up) before cooking.

After use

When you have finished cooking, switch off the mains socket and remove the **Plug** ⑦. Allow to cool.

Non-stick care

- Use only nylon or wooden utensils when cooking to maintain the life of the non-stick coating.
- Do not cut food while it is on the **Bottom Non-Stick Heating Plate** ⑤.

Tips:

- Use mozzarella specially made for pizza, as it contains less liquid.
- The Pizza Maker is also great for cooking omelettes, nachos, cookies and more.

Cleaning after use

CAUTION: ALWAYS BE SURE THAT THE PIZZA MAKER IS UNPLUGGED AND COMPLETELY COOLED BEFORE CLEANING OR ATTEMPTING TO STORE THE ITEM.

Inside:

1. Use kitchen towel to remove any remaining ingredients/oil.
2. Use a small amount of hot, lightly soapy water and a non-scratch nylon pan scourer, brush or dish cloth to clean both **Top** ④ and **Bottom** ⑤ **Non-Stick Heating Plates** on the inside of the Pizza Maker.
3. Repeat with clean water to rinse.
4. Dry thoroughly.

Outside:

1. The outside of the Pizza Maker may be cleaned with a cloth slightly dampened in a solution of washing up liquid in hot water. Take care not to get the outside of the appliance too wet.
2. Dry thoroughly.

DO NOT IMMERSE THE PIZZA MAKER IN WATER OR ANY OTHER LIQUID.

DO NOT USE ANY ABRASIVE MATERIAL TO CLEAN THE SURFACE.

Cautions

- Check that the electrical supply ratings of the appliance are correct for your home (see specification).
- The appliance must be connected via an earthed socket, which should have an individually rated load of above 10A. The **Plug ⑦** must be fully pushed into the socket. Overheating could occur if a socket is shared and overloaded.
- Do not insert **Plug ⑦** with wet hands.
- Do not leave the appliance unattended, especially when you are pre-heating.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Always keep the appliance out of the reach of children.
- Do not operate this appliance using a timer/controller, or remote control system.
- Do not place the appliance near a hot gas or electric burner, or in a heated oven.
- The appliance should be placed on a level stable worktop at least 10cm from walls or other solid obstructions.
- Do not use the appliance on a carpet or tablecloth.
- Do not move the appliance whilst in operation.
- Never move the appliance by pulling the **Power Cable ⑥**.
- Ensure that the **Power Cable ⑥** does not trail over the edge of the worktop, and that it is kept away from any hot object.
- The appliance will remain hot after cooking.
- Do not leave any cooking utensils in the appliance when hot.
- Do not immerse the appliance in water.
- Do not dishwash the appliance.
- Use the appliance only for its intended purpose.
- Never switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- Please retain your purchase receipt.

Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power
Judge Non-Stick Pizza Maker	JEA89	220-240v	50/60Hz	1000W



Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE

CUSTOMER SERVICES

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.horwood.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



RoHS



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY