

Cautions

- △ This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- △ Always keep the appliance out of the reach of children.
- △ Do not let children play with the appliance.
- △ Never leave the appliance unattended when it is heating.
- △ Always disconnect the appliance from the Mains supply when not in use.
- △ The appliance must be unplugged and allowed to cool before cleaning.
- △ Never immerse the appliance in water.
- △ Do not use the appliance if it is malfunctioning: contact Judge Customer Services at the address given under the Warranty details.
- △ The appliance will become hot during and after operation. Take care to keep hands away from hot surfaces and use the HANDLE to move the unit when hot.
- △ The appliance is intended for toasting one sealed sandwich only. Do not use the unit for any other purpose.
- △ Do not use the appliance outdoors.
- △ Do not use the appliance in a damp area.
- △ Provide adequate air space above and on all sides for air circulation. Always keep the area directly below the appliance clear.
- △ The appliance is intended for Domestic Use only.

Cautions

- △ Do not attempt to repair the appliance yourself - contact Judge Customer Services at the address given under the Warranty details.
- △ **Wear Oven Gloves or similar when operating or handling the appliance. The unit will remain hot for some time after it has been used.**
- △ **THE MOLTEN CONTENTS OF THE SANDWICHES WILL BE EXTREMELY HOT! REMEMBER TO ALLOW ADEQUATE COOLING TIME BEFORE EATING.**
- △ **BE ESPECIALLY AWARE OF THIS WHEN GIVING TOASTED SANDWICHES TO CHILDREN!**
- △ **THE APPLIANCE LID WILL BECOME HOT IN USE.**
- △ **EXTREME CAUTION: THE TOASTING PLATE WILL BECOME VERY HOT IN USE!**

Specification

Name	Model No.	Capacity	Rated Voltage	Rated Frequency	Rated Power
Judge Mini Sandwich Maker	JEA102	One Sandwich	220-240v	50-60Hz	600W

Judge 2 Year Domestic Electrical Guarantee



- ◆ The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- ◆ During this period, Judge will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- ◆ The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- ◆ The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- ◆ Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

 
Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

THIS PRODUCT IS INTENDED FOR DOMESTIC USE ONLY

UK CA CE RoHS

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Customer Services

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.judge.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



Mini Sandwich Maker

Model No. JEA102

600W



Instruction manual

- ◆ Please read carefully before use and save for later reference
- ◆ Unpack your Mini Sandwich Maker carefully
- ◆ Remove packing pieces, labels and stickers

Identifying the parts of your Judge Mini Sandwich Maker



1. Casing
2. Sandwich Toasting Plate
3. Warming Light
4. Closing Catch
5. Power Cord

Before first use

- ◆ Open the Sandwich Toaster by using the catch ④ at the centre of the handle. Brush or wipe a small amount of cooking oil onto the Toasting Plate ②. (This must be done for first use only).
- ◆ Plug the Sandwich Toaster into the Mains Supply. The Warming Light ③ will illuminate.
- ◆ When the Warming Light ③ switches off insert a suitable slice of bread, so that the toasting plate ② is covered.
- ◆ Close the Lid. Leave the unit on for approximately 5 minutes.
- ◆ Switch off the power, open the catch ④ and discard the toast.
- ◆ It is normal for smoke and smells to be emitted during this operation - manufacturing residues are being removed.

How to use

- ◆ Release the catch ④ and open the unit fully. Plug the Sandwich Toaster into the Mains Supply ensuring nothing is in close contact with the sandwich toasting plates ②).
- ◆ Once the Warming Light ③ switches off place your sandwich on the toasting plate ②.
- ◆ **GENTLY BUT FIRMLY** close the Lid until you feel the Catch ④ click into place. **DO NOT FORCE THE LID DOWN.**
- ◆ Toasting time is a matter of taste, but will usually be about two minutes.
- ◆ Your Sandwich Toaster toasts both sides of the sandwich at the same time and seals-in the flavour. In most cases the sandwiches will be cut in half by the built-in cutter. Sometimes separation with a knife is needed.
- ◆ If a sandwich filling has spread onto the Sandwich Toasting Plate ② and bread proves difficult to remove, the toasted sandwiches may be removed using a heat resistant plastic spatula. Do not use metal tools, as these will scratch the Non-Stick coating.

Tips

- ◆ Always use your Sandwich Toaster when it is at the correct toasting temperature (when the Warming Light ③ is off).
- ◆ To ensure the toaster closes easily we recommend that you avoid using 'thick cut' bread and overfilling your sandwich.
- ◆ To make a golden toasted sandwich, lightly butter the outside of the sandwich - place the filling between the unbuttered sides. If you intend to toast a sandwich which is not buttered on the outside, the Sandwich Toasting Plate ② may have to be lightly re-coated with cooking oil, butter or margarine between toasting.
- ◆ Use 'harder' cheeses such as Cheddar - processed cheeses tend to 'run' under high temperature.
- ◆ A little sugar sprinkled onto the buttered sides makes the toasted sandwiches crispier.

Toasted sandwich ideas

The Sandwich Toaster will allow you to invent a long list of favourite fillings, although specially dedicated cookbooks are readily available. Remember before you include them as a filling, meats must be pre-cooked (for example bacon), and some vegetables you may prefer to be pre-cooked (for example onion).

Here's a simple CHEESE TOMATO & ONION FILLING to get you started, sufficient for 2 - 3 sandwiches:

- ◆ Match the size of the bread to the size of the Toasting Plate sections.
- ◆ Thinly butter the outside of the bread.
- ◆ 125 ml grated Cheddar or other 'hard' cheese
- ◆ ½ large tomato, chopped and drained
- ◆ ½ onion, chopped and lightly fried
- ◆ Salt, pepper to taste. Mix with a fork.

Cleaning and storage

- ◆ Switch unit OFF at the socket, remove plug and allow the Sandwich Maker to cool thoroughly before handling.
- ◆ Wipe the Sandwich Toasting Plate ② with an absorbent cloth. Wipe the outside with a damp soapy cloth, and dry with a soft cloth. **DO NOT USE STEEL WOOL, SCOURING PADS OR ABRASIVE CLEANERS - INSIDE OR OUTSIDE.**
- ◆ When cool, the appliance stores upright.



Cautions

- △ Site the appliance on a firm level surface: protect precious surfaces with heat-insulated pads.
- △ The Power Cord must be positioned so that it cannot be unintentionally caught and pulled.
- △ The appliance should be sited away from soft furnishings or any other items that could burn.
- △ The appliance must be fitted to an Earthed Socket, which should have an individually rated load of above 10A. A socket which is shared and overloaded is a fire risk. The plug must be fully pushed into the socket.
- △ Do not plug the appliance in to a socket or operate with wet hands - or allow the Power Cord and Plug to get wet.
- △ Ensure the appliance Voltage and Power details match your home Supply.
- △ Do not operate the appliance if the Power Cord has become damaged - contact Judge Customer Services at the address given under the Warranty details.
- △ Do not let the Power Cord trail within the reach of children.
- △ Ensure the Power Cord is not allowed to touch the hot surface of the appliance, or any other heated object.
- △ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.