

Cautions (continued)

- △ As the appliance becomes hot during use, take care when handling it and use only the handle to lift.

△ Do not tilt the appliance backwards when filling or carrying it.

△ The appliance should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.

△ Do not use the appliance to heat liquids other than clean water.

△ Do not switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.

△ Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- △ **DO NOT IMMERSE ANY PART OF THE APPLIANCE IN WATER.**

△ Should the appliance accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.

△ Please keep your purchase receipt.

Specification

Name	Model No.	Capacity	Rated Voltage	Rated Frequency	Rated Power
Judge Cordless Glass Kettle	JEA93	0.5L-1.7L	220-240v	50-60Hz	1850-2200W

2

Year Guarantee

Domestic Electrical Use

- ◆ **The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.**
- ◆ During this period, Judge will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- ◆ The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- ◆ The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- ◆ Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

 **JUDGE**

Customer Services
Horwood, Avonmouth Way, Bristol,
BS11 9HX, Great Britain
www.horwood.co.uk
customerservice@horwood.co.uk
Tel: 0117 940 0000

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.


Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

THIS PRODUCT IS INTENDED FOR DOMESTIC USE ONLY

**UK
CA**  **RoHS**

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Cordless Glass Kettle

Model No. JEA93
2200W - 1.7 Litre



Instruction manual

- ◆ Please read carefully before use and save for later reference
- ◆ Unpack your Cordless Glass Kettle carefully
- ◆ Remove packing pieces, labels and stickers

Identifying the parts of your Judge Glass Cordless Kettle

- 1. Glass Kettle Body
- 2. Spout
- 3. Lid
- 4. Lid Opening Button
- 5. Filter
- 6. Water level indicator
- 7. On/Off switch
- 8. Power light
- 9. Base
- 10. Mains lead and plug



Before first use

- 1. Remove any labels and/ or swing tickets.
- 2. Wash the inside of the Glass Kettle Body ① with liquid detergent and warm water, rinse and dry.
- 3. Wipe the outside of the Glass Kettle Body ① and Lid ③ with a cloth, using liquid detergent and warm water.
- ◆ **DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER.**
- 4. Follow the “How to use” instructions to boil the maximum amount of water, then discard the water.
- 5. Repeat step 4 above.

Cleaning & Care

- ◆ Allow the Kettle to cool completely before cleaning.
- 1. Wash the inside of the Glass Kettle Body ① with liquid detergent and warm water, rinse and dry.
- 2. Wipe the outside of the Kettle Body ① and Lid ③ with a cloth, using liquid detergent and warm water.
- ◆ **DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER.**
- ◆ Do not use harsh abrasive cleaners, metal objects or a brush with metal bristles.
- ◆ Descale the Kettle regularly.
- ◆ To minimise scale build-up remove all water when the kettle is not in use (especially overnight).
- ◆ When the Kettle is not in use, remove all water and store in a dry place.

How to use

- 1. Position the Base ⑨ on a level and stable surface; unwind the Mains Lead ⑩ from the Base ⑨ to achieve the optimum length: please read the CAUTIONS on siting and connecting to your mains electricity.
- 2. Use the Lid Opening Button ④ to open the Lid ③.
- 3. Fill the Kettle as required - never less water than the Minimum (MIN) level shown, or more than the Maximum (MAX) level on the Water Level Indicator ⑥.
- 4. Close the Lid ③ by pushing it down.
- 5. Return the Glass Kettle Body ① to the Base ⑨.
- 6. Plug the base Mains Plug ⑩ into a mains power socket and switch the socket ON.
- 7. Switch the Kettle ON by moving the On/Off Switch ⑦ downwards. The Power light ⑧ will illuminate while the Kettle is heating.
- 8. The water will boil and then the Kettle will switch OFF automatically - the Power light ⑧ will extinguish.
- 9. The boiling sequence of the Kettle can be interrupted at any time by moving the On/Off Switch ⑦ upwards.
- 10. Switch off the mains socket and remove the Mains Plug ⑩.
- 11. Pour water from the Spout ② of the Kettle, as required.
- ◆ **TAKE CARE WITH VERY HOT WATER.**
- ◆ Once the water has cooled, it can be reheated by pressing the On/ Off Switch ⑦. This will not function while the water is still hot.
- ◆ **THE KETTLE HAS OVERHEATING PROTECTION, WHICH WILL AUTOMATICALLY SWITCH IT OFF. HOWEVER, YOU SHOULD TAKE CARE NOT TO ALLOW IT TO BOIL DRY.**

Cautions

- △ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- △ This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- △ Always keep the appliance out of the reach of children.
- △ Ensure that your home electrical supply corresponds to the requirements of the appliance - see “Specifications”.
- △ Do not connect the Mains Plug ⑩ into the socket, or use the appliance, if your hands or the appliance are wet.
- △ **THE APPLIANCE MUST ALWAYS BE EARTHED** - always connect to a mains socket with an earth connection.
- △ Unplug the appliance whenever it is not in use.
- △ Never leave the appliance unattended when it is operating.
- △ The Mains Lead should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- △ Do not use the appliance outdoors.
- △ Do not place the appliance close to a heat source.
- △ Ensure that the Mains Lead is not near any hot surface.
- △ Never switch the kettle on during descaling
- △ Pull the plug (do not pull Mains Lead) to disconnect from mains socket.
- △ Do not pull the Mains Lead to move the appliance.
- △ It is not recommended that the appliance be used with an extension lead. If this cannot be avoided, ensure that the extension lead is of the correct electrical rating.