

 **JUDGE**

Cordless Kettle

Model No. JEA87

2200W



Instruction Manual

Please read this instruction manual carefully before use and save for later reference.

UNPACK YOUR KETTLE CAREFULLY AND REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.

Identifying the parts

(with Part Numbers for customer replaceable items)



Before first use

1. Remove any labels and/or swingtickets.
 2. Wash the inside of the **Kettle Jug** ① with liquid detergent and warm water, rinse and dry.
 3. Wipe the outside of the **Kettle Jug** ① and **Lid** ③ with a cloth, using liquid detergent and warm water.
- **DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER.**
4. Follow the “**How to use**” instructions to boil the maximum amount of water, then discard the water.
 5. Repeat step 4 above.

How to use

1. Position the **Kettle Base** ⑦ on a level and stable surface; please read the **CAUTIONS** on siting and connecting to your mains electricity.
 2. Pull up the **Lid** ③ to open.
 3. Fill the **Kettle Jug** ① as required - never less water than the Minimum (**MIN 0.5L**) level shown, or more than the Maximum (**MAX 1.7L**) level on the **Water Level Indicator** ⑥.
- **DO NOT UNDERFILL OR OVERFILL.**
4. Close the **Lid** ③ fully by pushing it down.
 5. Return the Kettle to the **Kettle Base** ⑦.
 6. Plug the **Mains Plug** ⑩ into a mains power socket and switch the socket ON.
 7. Switch the Kettle ON by moving the **On/Off Switch** ⑤ downwards the **Heating Indicator** ⑤ will illuminate red while the kettle is heating.
 8. The water will boil and then the Kettle will switch OFF automatically - the **Heating Indicator** ⑤ will extinguish.
 9. The boiling sequence of the Kettle can be interrupted at any time by moving the **On/Off Switch** ⑤ upwards to the “0” position.
 10. Switch off the mains socket.
 11. Pour water from the **Spout** ② of the **Kettle Jug** ①, as required.
- **TAKE CARE WITH VERY HOT WATER.**
 - Once the water has cooled, it can be reheated by pressing the **On/Off Switch** ⑤. **This will not function while the water is still hot.**
 - **THE KETTLE HAS OVERHEATING PROTECTION, WHICH WILL AUTOMATICALLY SWITCH IT OFF. HOWEVER, YOU SHOULD TAKE CARE NOT TO ALLOW IT TO BOIL DRY.**

Cleaning & Care

- Allow the Kettle to cool completely before cleaning.
1. Wash the inside of the **Kettle Jug** ① and **Filter** ⑨ with liquid detergent and warm water, rinse and dry.
 - The **Filter** ⑨ can be removed for cleaning - see *fig. 1*.
 2. Wipe the outside of the **Kettle Jug** ① and **Lid** ③ with a cloth, using liquid detergent and warm water.
- **DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER.**
 - Do not use harsh abrasive cleaners, metal objects or a brush with metal bristles.
 - When the Kettle is not in use, store in a dry place.
 - Descale the kettle regularly.
 - To minimise scale build-up, empty the kettle and rinse it thoroughly after each use.

Cautions

- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always keep the appliance out of the reach of children.
- Do not connect the **Mains Plug** ⑩ into the socket, or use the appliance, if your hands or the appliance are wet.
- Unplug the appliance whenever it is not in use.
- **THE APPLIANCE MUST ALWAYS BE EARTHED** - always connect to a mains socket with an earth connection.
- Never leave the unit unattended when it is operating.
- The **Mains Lead** ⑩ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could accidentally be snagged or pulled by children.
- Do not use the Kettle outdoors.
- Do not place the Kettle close to a heat source.
- Ensure that the **Mains Lead** ⑩ is not near any hot surface.
- Pull the **Mains Plug** ⑩ (do not pull Lead) to disconnect from mains socket.
- Do not pull the **Mains Lead** ⑩ to move the appliance.
- It is not recommended that the Kettle be used with an extension lead. If this cannot be avoided, ensure that the extension lead is of the correct electrical rating.
- As the **Kettle Jug** ① becomes hot during use, take care when handling it and use only the **Handle** ④ to lift.
- Do not tilt the **Kettle Jug** ① backwards when filling or carrying it.
- Do not pour from the kettle while it is switched on.
- The Kettle should be used only as instructed and for the purpose for which it was intended; there is potential for injury or damage from misuse.
- Do not use the Kettle to heat liquids other than clean water.
- Do not use the Kettle with a timer or programming device.
- Do not switch on or attempt to operate the Kettle if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the Kettle yourself - contact Judge Customer Services at the address given in the warranty section.
- **DO NOT IMMERSE ANY PART OF THE KETTLE IN WATER.**
- Should the Kettle accidentally fall into water, unplug immediately and do not use; contact Judge Customer Services at the address given in the warranty section.
- Please keep your purchase receipt.

Specification

Name	Model No.	Capacity	Rated Voltage	Rated Frequency	Rated Power
Judge Cordless Kettle	JEA87	0.5L-1.7L	220-240v	50-60Hz	1850-2200W



Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

JUDGE

CUSTOMER SERVICES

Horwood, Avonmouth Way,
Bristol, BS11 9HX, Great Britain

www.judge.co.uk

customerservice@horwood.co.uk

Tel: 0117 940 0000



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY