
■ JUDGE

Digital Scale

 


Battery Installation

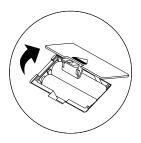

- The Judge Digital Scale takes 2 x 1.5V AAA batteries.
- Remove the battery cover as shown and install batteries according to the polarity markings.
- Please remove the batteries before long term storage.

LCD Display



Buttons



Short Press: Mode conversion **Long Press:** Unit conversion




Short Press: Turn on / Zero / Tare

Long Press: Turn off

Before use

- 1. Wash bowl in warm soapy water, dry thoroughly and return to scale.
- 2. Install batteries as detailed.
- 3. Place on a solid, flat surface.


Everyday Weighing

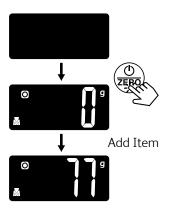

- 1. Short Press the (D) button to turn the scale on.
- Wait until the LCD display shows "0".
- 3. Place the object to be weighed into the bowl.
- 4. The weight will be shown on the LCD display.

Mode Selection

Short press the UNIT button to change between Weight, Milk Volume and Water Volume modes.

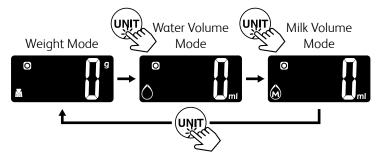

Metric and Imperial Measurement Selection

Long press the (UNIT) button change between Metric (g/ml) and Imperial measurements (lb:oz/fl'oz)




Water/Milk Volume mode



- 1. Short Press the turn the scale on.
- 2. Wait until the LCD display shows "0".
- 3. Short Press the (UNIT) button to select water measurement (or Short Press again for milk measurment).
- 4. Add water to the bowl.
- 5. The volume will be shown on the LCD display.
- 6. Convert from liquid to weight measurement by Short Pressing the button.

Zero Function

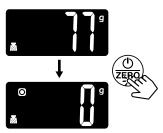


To zero the scale and weigh another item (without removing the previous item) Short Press the (ZERO) button.

Note: The Zero Weight symbol will only appear if the total load is less than 200g. Tare mode is activated above 200g, see overleaf.

Add Weigh/Tare Mode Function

Note: Tare Mode can only be used if the total initial load is greater than 200g.

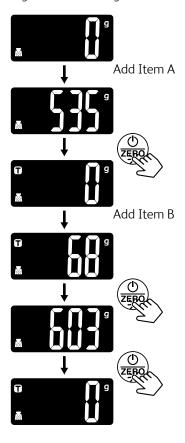

Tare mode allows you to weigh consecutive items without removing the previous item from the scale

- 1. Place Item A into the bowl. Weight of Item A is displayed.
- 2. Short Press the Determined button to activare Tare Mode and reset the LCD to '0'
- 3. Place Item B in the bowl. Weight of Item B is displayed.
- 4. Short Press the again. Total weight of both
 Item A and Item B is displayed.
- 5. Short Press the tube button again to continue adding items.

Manual Shut Off

Long press the Detton.

Auto Shut Off (Power Saving Mode)

Auto shut off occurs is the display shows '0' or the same weight reading for more than a couple of minutes.

Error Codes

Err	Overload warning	Scale is loaded past the maximum capacity (5kg) - Remove items to avoid damaging the scale.
Lo	Low battery warning	Battery power is low, please replace the batteries.

Cleaning and care

- Clean the scale with a damp cloth or taint free wipe.
- Do not immerse the scale in water.
- Do not use harsh chemical/abrasive cleaning agents.
- Immediately clean plastic parts after contact with fats, spices, vinegar and strongly flavoured/coloured foods.
- Avoid contact with acidic citrus juice.
- Do not knock, drop or drop any item onto the scale.
- Store in a cool dry place when not in use.
- For domestic use only.



■ The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for

a period of TWO YEARS from the date of original retail purchase.

- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

∌ JUDGE

CUSTOMER SERVICES Horwood, Avonmouth Way, Bristol, BS11 9HX, Great Britain

www.horwood.co.uk

customerservice@horwood.co.uk Tel: 0117 940 0000



FOR DOMESTIC USE ONLY

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.