

Troubleshooting & Repair

Fault		Possible causes	Solutions
Power Switch indicator light does not illuminate	Hotplate does not heat	Power is not connected	Check the switch, socket, fuse, power cable and circuit breaker at Consumer Unit
	Hotplate heats up	The indicator or associated circuit is faulty	Contact Judge Customer Services
Indicator light illuminates	Hotplate does not heat	1. Heating circuit is faulty 2. Element is burnt-out	Contact Judge Customer Services
Water / coffee escaping from appliance		1. Ensure the Non-drip Valve is operating correctly 2. Too much ground coffee in the filter 3. Dirty / blocked filter 4. Silicone tube ruptured or become detached	1. Wash Removable Filter whilst operating the no-drip valve and replace 2. Decrease the amount of ground coffee 3. Wash and replace 4. Do not use. Contact Judge Customer Services
Unit stops working during operation		Safety cut -off operated	Turn Power Switch OFF and at mains. Leave unit for 1 minute and retry. If this fails Contact Judge Customer Services
Residue of coffee in the jug		1. Coffee too fine 2. Damaged filter	1. Use coarser filter coffee 2. Contact Judge Customer Services
Slow coffee delivery into the Glass Jug		Glass Jug not in correct position on hot plate	Reposition Glass Jug on hot plate

Specification

Name	Model No.	Rated Voltage	Rated Frequency	Rated Power	Rated Capacity	Reservoir Capacity
Judge Filter Coffee Machine	JEA65	220 - 240V	50/60Hz	550- 650W	625ml	1 - 6 cups



Judge 2 Year Domestic Electrical Guarantee

The Judge Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase. During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.

The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.

The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.

THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.

Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.


Errors and Omissions Excepted.

JUDGE CUSTOMER SERVICES, HORWOOD, AVONMOUTH WAY, BRISTOL, BS11 9HX, GREAT BRITAIN

sales@horwood.co.uk www.judgecookware.co.uk Tel: 0117 940 0000



CORRECT DISPOSAL OF THIS PRODUCT

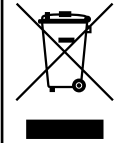

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY



JUDGE

Filter Coffee Machine



Instruction Manual

Model No. JEA65

V002

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE USE AND KEEP FOR LATER REFERENCE.

UNPACK YOUR FILTER COFFEE MACHINE CAREFULLY AND REMOVE PACKING PIECES AND TEMPORARY LABELS & STICKERS.

Identifying the parts

1. Removable Permanent Mesh Filter (JEA65PF)
2. Removable Filter Holder with Non-drip Valve (JEA65FH)
3. Water Reservoir
4. Hinged Reservoir Lid
5. Water Level Indicator
6. Power Switch with 'ON' light indication
7. Power Cable
8. Hotplate
9. Glass Jug (JEA65GJ)
10. Measuring Spoon (JEA65MS)




Before first use and after prolonged storage

- Rinse the inside of the Water Reservoir (3) with warm water and discard. DO NOT immerse the main body of the coffee machine in water.
- The Removable Permanent Mesh Filter (1), Removable Filter Holder (2) and Glass Jug (9) should be washed in warm soapy water rinsed and dried. These components are not dishwasher safe.
- Wipe the Hotplate (7) and all external surfaces with a clean damp cloth and dry thoroughly. Ensure the Power Switch (6) is in the 'OFF' position

Assembly

Assemble the components as indicated on the previous page. Ensure the Removable Filter Holder (2) is secured correctly as indicated below.

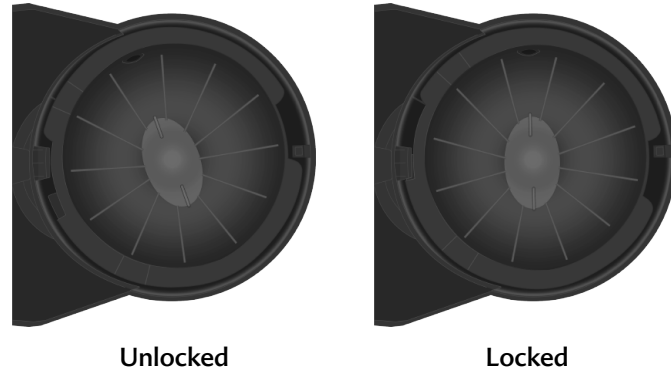

How to make coffee

- Fill the Water Reservoir (3) with the desired amount of water as indicated on the Water Level Indicator (5). Do not exceed the MAX water level mark (0.6 L).
- Using the supplied Measuring Spoon (10) measure the required amount of filter coffee into the Removable Permanent Mesh Filter (1) spreading it out evenly.
- Close the Hinged Reservoir Lid (4).
- Place the Glass Jug (9) onto the Hotplate (8). This must be in place during brewing process to prevent the filter from flooding. Ensure the Power Switch (6) is in the 'OFF' position.
- Plug the Power Cable (7) into your socket (check your supply is compatible with the Rating Information).
- Press the Power Switch (6) up to switch ON. A red light will now illuminate on the switch indicating that the water is heating.
- After a few minutes the water will heat and flow into the filter section of the machine and the Glass Jug (9) will fill with coffee.
- Serve the coffee as required. The Non-drip Valve will prevent any coffee dripping onto the hotplate.
- Coffee will be kept warm whilst the machine is ON.
- Switch the Filter Coffee Machine OFF when the Glass Jug (9) is empty or the coffee is no longer required.
- **WARNING! The hotplate will remain hot for some time after switching OFF**
- Allow the appliance to cool.

Maintenance

- At least every month follow the steps in 'Before first use and after prolonged storage' section.

Cautions

- Before use, check that your mains power supply corresponds to the voltage shown in this manual (also shown on the rating plate of the Filter Coffee Machine, located under the base).
- Do not let the Power Cable (9) hang over the edge of the counter or work-top, or let it touch hot surfaces.
- The Hotplate (8) will remain hot for some time after switching OFF.
- Do not overfill.
- Do not cover the steam vents in the Hinged Reservoir Lid (4)
- Do not the touch the Hinged Reservoir Lid (4) or Hotplate (8) during operation as there could be a scalding and burn hazard.
- Before use, ensure that the Hotplate (8) is clean and dry.
- The Filter Coffee Maker must be placed on a flat and stable surface.
- Do not drop the Filter Coffee Machine.
- Handle the the Glass Jug (9) with care to avoid knocks which could crack or distort it. If the pot has become cracked or distorted do not use it; contact Judge at the address given beneath the warranty statement.
- Do not place the Filter Coffee Machine near any other heat source as this could lead to distortion.
- This appliance must be plugged into an earthed socket rated at over 10A.
- Do not share a socket with other appliances, as it may overheat and cause a fire.
- Do not immerse the plug or main body in water or other liquids.
- Unplug the Filter Coffee Machine when not in use.
- Allow the Filter Coffee Machine to cool before attaching or detaching any parts.
- Do not use accessories from any other manufacturer's appliance.
- If the mains supply cable becomes damaged, contact Judge at the address given beneath the warranty statement.
- Do not tamper with any of the safety systems beyond the maintenance instructions specified.
- Do not attempt to repair the appliance. In case of breakdown return it to Judge at the address given beneath the warranty statement.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.