

 **JUDGE**

# Electric Potato Peeler

Model No: JEA67



Please read this instruction manual carefully before use and save for later reference.

**UNPACK YOUR ELECTRIC POTATO PEELER CAREFULLY AND REMOVE PACKING PIECES, LABELS AND STICKERS BEFORE USE.**

# Identifying the parts of your Judge Electric Potato Peeler

(with Part Numbers for customer replaceable items)

- ① Base Unit
- ② Bowl (JEA67B)
- ③ Peeling Disk (JEA67PD)
- ④ Lid (JEA67L)
- ⑤ On/Off Switch
- ⑥ Lid Clips
- ⑦ Upper Cut-Out Switch
- ⑧ Lower Cut-Out Switch
- ⑨ Mains Cable and Plug



Reverse view of Potato Peeler



**\*Take care when handling the Peeling Disk ③ as parts are very sharp.**

## Before first use

- Wash the Bowl ②, Peeling Disk\* ③ and Lid ④ in hot soapy water using a non-scratch brush or scourer, then rinse. Dry thoroughly using a soft cloth.
- Make sure the Base Unit ① is positioned on a clean, dry surface and that the rubber feet are stable.
- Assemble (see Assembly) before plugging ⑨ in your Potato Peeler to the mains power.

## Assembly

---

1. Check that the On/Off Switch ⑤ is set to off before assembly.
2. Place the Bowl ② onto the Base Unit ① ensuring the Lower Cut-Out Switch ⑧ is aligned. **Failure to position correctly will prevent the Potato Peeler from operating.**
3. Place the the Peeling Disk\* ③ onto the axis inside the Bowl ②.
4. Add enough potatoes to the Bowl ② to cover the Peeling Disk\* ③ (maximum of 1kg).
5. Add a little water (maximum 200ml) to the Bowl ② aid peeling.
6. Place the Lid ④ onto the Bowl ② with the 'T' section to the rear. The 'T' section must slot into the Upper Cut-Out Switch ⑦ at the rear of the bowl.
7. Push both the front and rear Lid Clips ⑥ upwards to lock the Lid ④ into place. **Failure to position correctly will prevent the Potato Peeler from operating.**

## Tips

---

- Do not overload the peeler, have a maximum weight of 1Kg at a time.
- Do not use baking potatoes, as these are too large, for best results cut your potatoes so that they measure no more than 5cm x 5cm.
- Wash potatoes in fresh water before cooking.
- Sprinkle with flour, before putting in the oven.

## Peeling Potatoes

---

1. Plug ⑨ the Potato Peeler into the Mains socket
  2. Set the On/Off Switch ⑤ to — (On).
  3. The Potato Peeler will begin to function. (The appliance may vibrate during use but the rubber feet keep the appliance from moving significantly).
  4. As a rough guide, the Potato Peeler should take around 2 minutes to peel a quantity medium sized potatoes. Due to potatoes varying in size and shape, this time may vary. Smaller potatoes will give better results than large.
  5. Check progress regularly, never allow the machine to operate continuously for longer than four minutes and allow ten minutes between each four minute use period.
  6. Once potatoes are peeled set the On/Off Switch ⑤ to ○ (Off).
  7. Unplug ⑨ the Potato Peeler from the Mains socket.
  8. Remove the potatoes from the Bowl ②.
  9. The Potato Peeler can not remove skin from recesses or irregular shapes. Remove any remaining skin/eyes by hand using a small knife.
- Wash potatoes in fresh water before cooking.

## Cleaning

- Always set the On/Off Switch ⑤ to **O** (Off) and unplug ⑨ the Potato Peeler from the Mains socket before cleaning.
- Wash the Bowl ②, Peeling Disk\* ③ and Lid ④ in hot soapy water using a non-scratch brush or scourer, then rinse. Dry thoroughly using a soft cloth.
- No parts of the Potato Peeler are suitable for dishwasher use.
- Never use harsh abrasives to clean the Potato Peeler.
- Never immerse the Mains Cable and Plug ⑨ or Potato Peeler Base Unit ① in water or any other liquid. Wipe clean with a damp cloth when necessary.

## Troubleshooting

Problem	Cause	Solution
The Peeling Disk* ③ does not rotate.	Safety Cut-Out Switches ⑦ and ⑧ are not correctly aligned	Ensure that both the Upper and Lower Safety Cut-Out Switches ⑦ and ⑧ are correctly aligned as detailed in the ' <b>Assembly</b> ' section.
Unit does not switch on	Fuse in the Mains Plug ⑨ has failed.	Check fuse and replace.
Potatoes not fully peeled	Irregularly shaped potatoes	The Peeling Disk* ③ can not peel into recesses or irregular shapes - finish by hand The Peeling Disk* ③ can not peel into recesses or irregular shapes - finish by hand

## Cautions

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- Otherwise, always keep the appliance out of the reach of children.
- Do not use the appliance with an external timing device or a separate remote-control system.
- Assemble fully as described in this manual before connecting to the mains power supply.
- Never site the Potato Peeler on or near a hot gas or electric hob or in a heated oven.
- Before use, check that your mains power supply corresponds to the voltage shown in this manual.
- Only use in a standard earthed UK mains socket.
- Never connect the Plug ⑨ to the mains socket with wet hands.
- The Mains Lead ⑨ should be positioned so as not to cause an obstruction or to overhang the edge of the surface, where it could snagged or pulled by children.
- Ensure that the Mains Lead ⑨ is not near any hot surface.
- Unplug the appliance whenever it is not in use.
- Pull the Plug (never the Mains Lead) to disconnect from mains socket.
- Never immerse the Mains Cable and Plug ⑨ or Potato Peeler Base Unit ① in water or any other liquid.
- Never use Potato Peeler if the power cable, plug or any other part is damaged.
- Never use the appliance for any other purpose than for which it is intended.
- The appliance should only be used as instructed: there is potential for injury from misuse.
- Never put your fingers or any object into the Bowl ② when the motor is running or the Peeling Disk\* ③ is rotating.
- Never leave the appliance unattended when it is operating.
- Never open the appliance whilst it is in operation.
- Never use any other accessories other than those included.
- Never use continuously for more than four minutes and allow ten minute between each four minute use period.
- Never load with more than 1kg of potatoes, this will give poor results and may damage your appliance.
- Never use outdoors.
- Always set the On/Off Switch ⑤ to **O** (Off) and unplug ⑨ when not in use.
- Never switch on or attempt to operate the appliance if it appears to be faulty in any way - contact Judge Customer Services at the address given in the warranty section.
- Never attempt to make any repair to the appliance yourself - contact Judge Customer Services at the address given in the warranty section.
- Please retain your purchase receipt.

# Specification

Name	Model No.	Rated Wattage	Rated Frequency	Rated Power
Electric Potato Peeler	JEA67	85W	50/60Hz	220-240V



## Judge 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period, JUDGE will, at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance yourself.
- **THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.**
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

**HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT (INCLUDING COLOUR FADING, SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.**

*Note: Due to the introduction of improvements from time to time, the right is reserved to supply products which differ slightly from those illustrated and described in this publication.*

Errors and Omissions Excepted.

### JUDGE

#### CUSTOMER SERVICES

Horwood, Avonmouth Way,  
Bristol, BS11 9HX, Great Britain

[www.horwood.co.uk](http://www.horwood.co.uk)

[customerservice@horwood.co.uk](mailto:customerservice@horwood.co.uk)

Tel: 0117 940 0000



**FOR DOMESTIC USE ONLY**

### CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.