Cautions (continued)

- Never use the Egg Cooker when it has been dropped, shows damage (including to the power cable) or does not function properly: contact Judge at the address given. Do not attempt to repair the Egg Cooker vourself.
 - Do not attempt to repair the Egg Cooker. In case of breakdown return it to Judge at the address given beneath the Guarantee statement.
- If the mains supply cable becomes damaged, contact Judge at the address given beneath the warranty statement.
- Do not operate the Egg Cooker with a damaged Power Cable or Plug.

Specification

Name	Model No.	Power Supply	Wattage range	Egg Capacity
7 Hole Egg Cooker	JEA73	220-240v / 50Hz	350W	7

THIS PRODUCT MUST BE EARTHED.



CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FOR DOMESTIC USE ONLY



Judae 2 Year Domestic Electrical Guarantee

- The Judge 2 Year Domestic Electrical Guarantee covers the product to be free of defects in materials and workmanship for a period of TWO YEARS from the date of original retail purchase.
- During this period. JUDGE will. at their option, repair or replace defective parts of the product, or replace the product, providing the Use Care and Safety Advice have been followed.
- The Guarantee does not cover damage, defect or failure caused by or resulting from accidents, external damage, alteration, modification, abuse, misuse or misapplication.
- The Guarantee does not cover any damage caused by taking the appliance apart yourself, or attempting to repair the appliance vourself.
- THE PRODUCT IS INTENDED FOR DOMESTIC USE ONLY.
- Please keep your Purchase Receipt and contact us directly if you encounter any problems with your product.

HORWOOD SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES **RESULTING FROM THE USE OF** THIS PRODUCT (INCLUDING COLOUR FADING. SCRATCHES OR ACCUMULATED DIRT) WITHOUT FOLLOWING THE USE, CARE & SAFETY INSTRUCTIONS.

Note: Due to the introduction of improvements from time to time. the right is reserved to supply products which differ slightly from those illustrated and described in this publication.

Errors and Omissions Excepted.

₫ JUDGE CUSTOMER SERVICES

Horwood, Avonmouth Way, Bristol, BS11 9HX, Great Britain

www.judgecookware.co.uk

customerservice@horwood.co.uk Tel: 0117 940 0000



Automatic 7 Hole Egg Cooker

Model No: JEA73



Please read this instruction manual carefully before use and save for later reference.

₫ JUDGE



Unpack your Egg Cooker carefully and remove packing pieces, labels and stickers before use.

Identifying the parts of Your Judge 7 Hole Egg Cooker

5

 \overline{O}

 
6

with Part Numbers for customer replaceable items

- 1. Cooking Rack JEA73R
- 2. Lid JEA73L
- 3. Switch
- 4. Plug
- 5. Measuring Cup JEA73C
- 6. Egg Needle
- 7. Water Level Scale Guide
- 8. Heating Plate
- 9. Steaming Platform JEA73S

How to use

- 1. Place the cooker on a stable flat surface. Take out the cable. Measuring Cup (5) and open the Lid (2).
- 2. Fill the Measuring Cup (5) with cool water to the desired level using the Water Level Scale Guide ⑦ choosing: Hard, Medium or Soft and the number of eggs to be cooked. Pour the contents onto the Heating Plate (8).
- 3. Pierce the large end of each eag with the Eag Needle (6) (this will prevent the egg shell from cracking while the eggs are cooking). Place the eggs, pierced end up, in the Cooking Rack (1) and securely fit the Lid 2. (CAUTION: The Egg Needle 6 is very sharp – use extreme care to avoid injury or breaking the egg).
- 4. Plug ④ the cooker into the power socket and Switch ③ on. When all of the water has evaporated, an alarm will sound, signalling that the eggs are ready. Switch ③ the cooker off and unplug it from the power socket.



How to use (Continued)

- 5. With the eags still on the Cooking Rack (1), carefully remove and rinse under cold water. (CAUTION: After cooking has finished, the cooker and eggs will be very hot. Use caution when handling).
- 6. Serve eggs immediately.
- 7. It is important to keep the Heating Plate (8) clean. When cooled after use, wipe with a clean cloth.

Steamina

- 1. Fill the Measuring Cup (5) and pour the contents onto the Heating Plate (8).
- 2. Place the Steaming Platform (9) onto the Cooking Rack (1).
- 3. Place the item(s) to be steamed on top of the Steaming Platform (9).
- 4. Plug ④ the cooker into the power socket and Switch ③ on.
- 5. Cooking will continue until all of the water has evaporated, at which point an alarm will sound. The time vill vary depending on the contents of the cooker. You should use your judgement as to how long the item being steamed needs to cook.
- 6. To interrupt the cooking process before the alarm sounds Switch ③ the cooker off and carefully remove the Lid (2), taking care to protect your hands from steam.
- 7. It is important to keep the Heating Plate (8) clean. When cooled after use, wipe with a clean cloth.

Cooking Tips

- The Water Level Scale Guide (7) is based on cooking UK MEDIUM sized eggs. Timings may vary when cooking smaller or larger eags.
- For best results use eggs at room temperature
- When cooking fewer eggs, steam escapes from the steam vent at a faster rate. Therefore, in order to reach the same cooking degree a little more water is needed.
- The Measuring Cup (5) marks are only a guide. Adjust the guantity of water according to your own personal preference.

Cleaning and Maintenance

- Before cleaning, unplug the cooker from the power socket.
- Use a clean damp cloth to wipe the Heating Plate (8). Never immerse the cooker in water to clean.
- Wash the Lid (2) and Cooking Rack (1) and Steaming Platform (9) in hot soapy water.
- Do not scratch the Heating Plate (8) with sharp objects.
- Place the Cooking Rack ① Steaming Platform (9) and Measuring Cup (5) inside the cooker for storage.

Cautions

- Please read this instruction manual carefully before use and save for later reference.
- Check that the electrical supply ratings of the Egg Cooker are correct for your home (see Specification)
- Ensure that the Plug ④ is in good condition before use.
- Do not let the cable hang over edge of the table or worktop.
- Place the Egg Cooker on a flat surface and do not place it on or near other heat sources such as an electric or gas cooker.
- Do not insert the Plug ④ with wet hands.
- To prevent the risk of electric shock do not immerse the Egg Cooker, cable or plug in water or other liquids.
- Keep the Egg Cooker and its cord out of reach of children less than 8 years.
- Do not use the Egg Cooker outdoors or in a • This Egg Cooker can be used by children aged from 8 years and above and persons with humid environment. reduced physical, sensory or mental capabilities • Do not move the Egg Cooker while in use. or lack of experience and knowledge if they • Do not leave the Egg Cooker unattended have been given supervision or instruction during use. concerning use of the Egg Cooker in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

2

9

- Do not let children to play with the Measuring Cup (5) as there is a sharp needle on the base.
- Do not operate the Egg Cooker using a timer/controller. or remote control system.
- Note there is a "boil dry"safety feature that automatically switches the heating element off and sounds the alarm.
- Do not obstruct or touch the Lid ② during cooking, as there will be steam rising from the vent.
- Do not allow the Egg Cooker to burn dry as this may reduce the cooker's service life.
- Always unplug from the power socket and allow the cooker to cool before cleaning.
- Do not scratch the Heating Plate ⑧.
- The Egg Cooker should only be used in accordance with the instruction booklet.